

addabath.com


P-Trap Toilet and Connector Add-A-Bath Components



Water Saver Cistern

P-Trap Toilet

P-Trap Connector

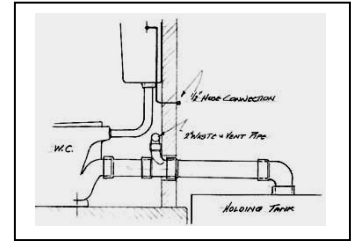

How it Works

P-Trap Toilet & Connector

The add-a-bath lavatory kit can be installed in the following: outbuildings – garage – sick room closets – basement – commercial – warehouse

Water Source

Garden Hose - Hard Plumbed - Water Tank

Waste Disposal

Sewer – Septic Tank – Holding Tank

Toilets.com

Phone: 800-521-6310 Fax: 586-739-4611

E-mail: info@toilets.com Web Page: www.toilets.com



P-Trap Toilet & Connector Assembled

addabath.com

Automatic Faucet Add-A-Bath Component

Automatic faucet shuts off water in 9 seconds and is used with our 300 gallon holding tank to save water.



- Water Input Lines
- Sink Drain Grid
- Water Shut Off Valves
- Sink Mounting Brackets
- Sink Drain & Vent Parts
- Automatic Shut Off
- Ceramic Corner Sink

Automatic Faucet AABA144AF

Mixer Faucet Add-A-Bath Component

Mixer Faucet is used with hot water and a sewer or septic tank connection

- Water Input Lines
- Sink Drain Grid
- Mixer Faucet
- Water Shut Off Valves
- Sink Mounting Brackets
- Sink Drain & Vent Parts
- P-Trap & Plumbing Connector
- Ceramic Corner Sink
- P-Trap Toilet & Cistern




Mixer Faucet AABA144MF

addabath.com


add a bath kit components in use



Automatic Faucet

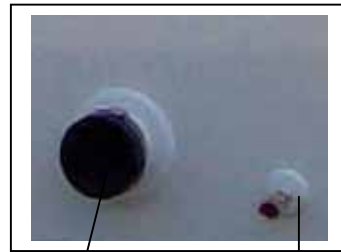

Waste Exit & Water Intake

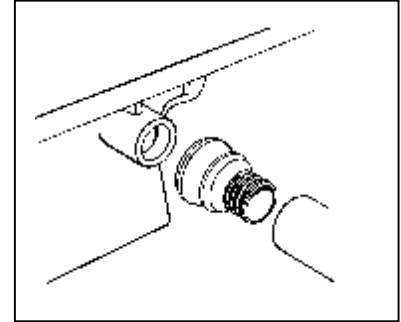

2" - 3" - 4" Waste Exit



Closet Bathroom



Hard Plumbed

Garden Hose

Water Hook Up



Basement Bathroom



Outbuilding Bathroom

The Add-A-Bath lavatory kit can be installed in the following: outbuildings – garage – sick room closets – basement – commercial – warehouse, etc.

Water Source

Garden Hose - Hard Plumbed - Water Tank

Waste Disposal

Sewer – Septic Tank – Holding Tank

Toilets.com

Phone: 800-521-6310 Fax: 586-731-0760


E-mail: info@toilets.com

Web Page: www.toilets.com

Add-A-Bath Placed In a Shower



The Add A Bath can be placed in a shower stall that you can purchase at any home improvement store. The P-attached picture, does not show the shower may require ground excavation. Those add-a-bath holding tank can be partially run-off to flow into the waste or reconditioned 300 gallon

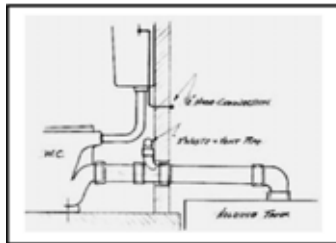

Trap toilet, as shown in the require ground excavation. The excavation and you may be water from the shower into the installations that require a buried to allow for the shower tank. You can purchase a new waste tank from Porta John®.

The dimensions for the black waste tank or white water tank are 48" wide x 84" long x 18" high.



Waste Tank



Water Tanks