

# addabath.com


P-Trap Toilet and Connector Add-A-Bath Components



Water Saver Cistern

P-Trap Toilet

P-Trap Connector

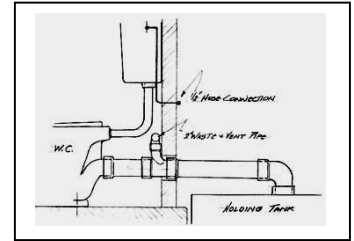

How it Works

P-Trap Toilet & Connector

The add-a-bath lavatory kit can be installed in the following: outbuildings – garage – sick room closets – basement – commercial – warehouse

### Water Source

Garden Hose - Hard Plumbed - Water Tank

### Waste Disposal

Sewer – Septic Tank – Holding Tank

### Toilets.com

Phone: 800-521-6310 Fax: 586-739-4611

E-mail: [info@toilets.com](mailto:info@toilets.com) Web Page: [www.toilets.com](http://www.toilets.com)



P-Trap Toilet & Connector Assembled

# addabath.com

## Automatic Faucet Add-A-Bath Component

*Automatic faucet shuts off water in 9 seconds and is used with our 300 gallon holding tank to save water.*



- Water Input Lines
- Sink Drain Grid
- Water Shut Off Valves
- Sink Mounting Brackets
- Sink Drain & Vent Parts
- Automatic Shut Off
- Ceramic Corner Sink

Automatic Faucet AABA144AF

\*\*\*\*\*

## Mixer Faucet Add-A-Bath Component

*Mixer Faucet is used with hot water and a sewer or septic tank connection*

- Water Input Lines
- Sink Drain Grid
- Mixer Faucet
- Water Shut Off Valves
- Sink Mounting Brackets
- Sink Drain & Vent Parts
- P-Trap & Plumbing Connector
- Ceramic Corner Sink
- P-Trap Toilet & Cistern




Mixer Faucet AABA144MF

# addabath.com


add a bath kit components in use



Automatic Faucet

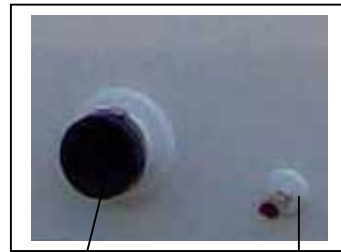

Waste Exit & Water Intake

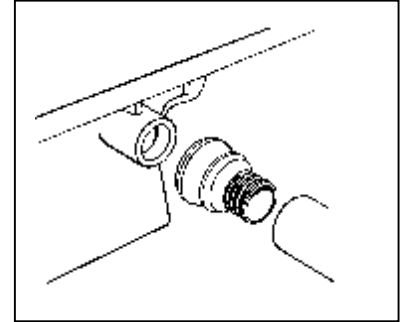

2" - 3" - 4" Waste Exit



Closet Bathroom



Hard Plumbed

Garden Hose

Water Hook Up



Basement Bathroom



Outbuilding Bathroom

The Add-A-Bath lavatory kit can be installed in the following: outbuildings – garage – sick room closets – basement – commercial – warehouse, etc.

### Water Source

Garden Hose - Hard Plumbed - Water Tank

### Waste Disposal

Sewer – Septic Tank – Holding Tank

### Toilets.com

Phone: 800-521-6310 Fax: 586-731-0760


E-mail: [info@toilets.com](mailto:info@toilets.com)

Web Page: [www.toilets.com](http://www.toilets.com)

# Add-A-Bath Placed In a Shower



The Add A Bath can be placed in a shower stall that you can purchase at any home improvement store. The P-attached picture, does not show a shower pan, but the shower may require ground excavation to discharge the grey water into the ground. Those add-a-bath holding tanks can be partially run-off to flow into the waste or reconditioned 300 gallon tank. The dimensions for the black waste tank or white water tank are 48" wide x 84" long x 18" high.

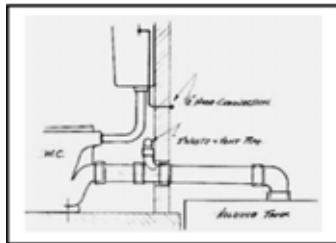

Trap toilet, as shown in the picture, does not require ground excavation. The excavation and you may be required to allow for the shower tank. You can purchase a new waste tank from Porta John®.



Waste Tank



Water Tanks